

Wake the Motor (New Installation)

1. Press and hold the Motor button for 3 seconds
 - a. The LED light will then blink green, and the louvres will begin to move as it calibrates itself




Do not interrupt the shutter during this process. When completed, the louvres will finish in the open position

Before following the instructions below, please check that the G4 PerfectTilt system is not already configured. The Remote(s), Motors, and Hub are designed to be pre-programmed in the factory and do not require further set-up.





Add or Remove Shutter(s) from a Remote Channel

1. Press the Motor(s) button for 1 second
 - a. The LED light will then blink green, and the louvres will move to the open position
2. Press and hold the SET button on the Remote for 3 seconds
 - a. The Remote buttons will pulse white
3. Press the Channel (1-5) for the Motor to be added to or removed from
 - a. If the Motor is added, the louvres will respond once
 - b. If the Motor is removed, the louvres will respond twice
4. Press and hold the SET button on the Remote for 3 seconds





Set the Favourite Position (☆)

1. Press the BestPrivacy button  on the Remote
 - a. The louvres will move to the closed position
2. Using the down button  or the SmartDial on the Remote, adjust the louvres to the desired favourite position
3. Press and hold the SET button on the Remote for 3 seconds
 - a. The Remote buttons will pulse white
4. Press the Favourite button  for 1 second
 - a. The louvres will respond once
5. Press and hold the SET button on the Remote for 3 seconds

Set the Horizontal/BestView (▲) Position

1. Select the Channel (1-5) of Motors to adjust
2. Press the Up () button for 1 second to fully close the louvres
3. Using the Down button () or the SmartDial on the Remote, adjust the louvres to the BestView () position
4. Press the RESET button on the back of the Remote for 1 second
5. Select the Channel (1-5) of the Motors to set
6. Press the BestView () button
 - a. The Remote buttons will blink white 3 times (the louvres will respond once)
7. Press the RESET button on the back of the Remote for 1 second

Pair Remote(s) to the Hub

1. Press the RESET button on the back of the Remote(s) for 1 second
2. Press the Hub () button once
3. The Remote buttons will be solid white for 3 seconds
4. Press the Favourite () button on the Remote(s)
5. Press and hold the Hub () button for 3 seconds
 - a. The LED will turn blue
6. Within 5 seconds, Press the Hub () button once
7. The LED will flash white and blue continuously and, when the sync is complete, the Hub LED will turn solid white

